


Carefully place sink back into the countertop opening and align to the blue tape guide to ensure it is perfectly square with the counter top.

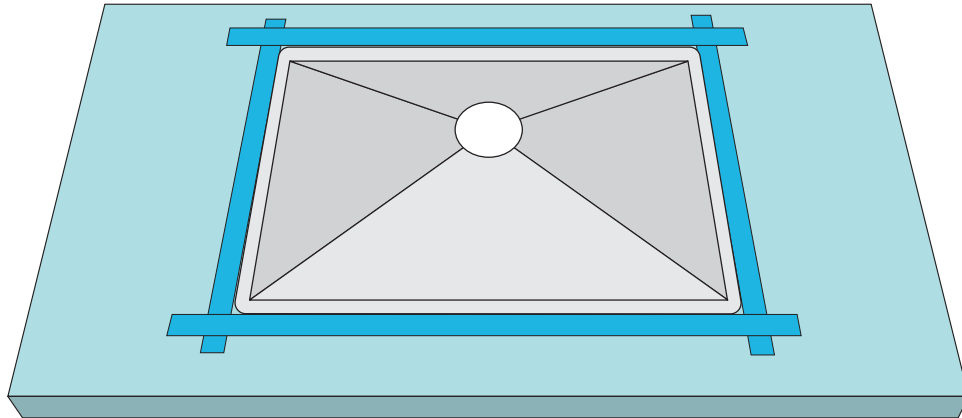

Apply gentle and even downward pressure to the top of the sink rim to allow silicon to set.

