
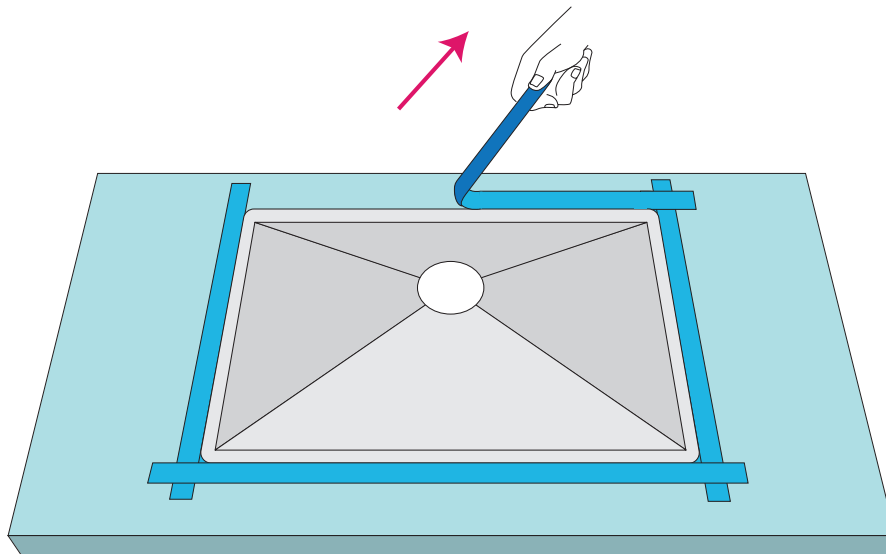


STEP 6: FINAL STEP

Peel off all of the blue painters tape.

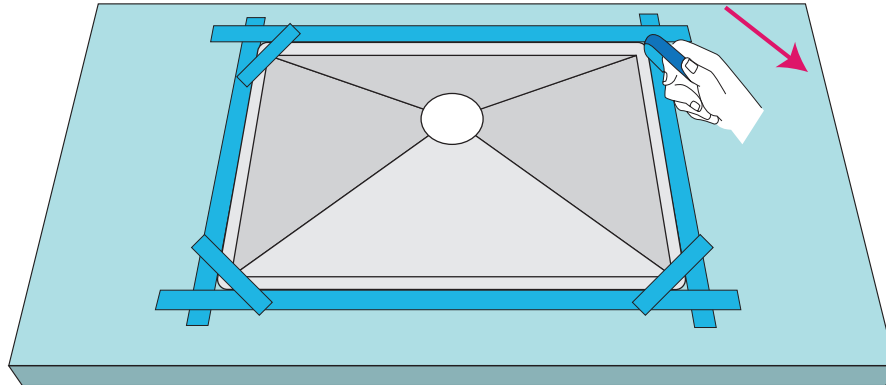

**The installation is now complete.
Please enjoy your sink!**