



STEP 7: SECURING THE SINK

Apply blue painters tape to all four sides of the sink frame to keep sink from moving out of alignment.

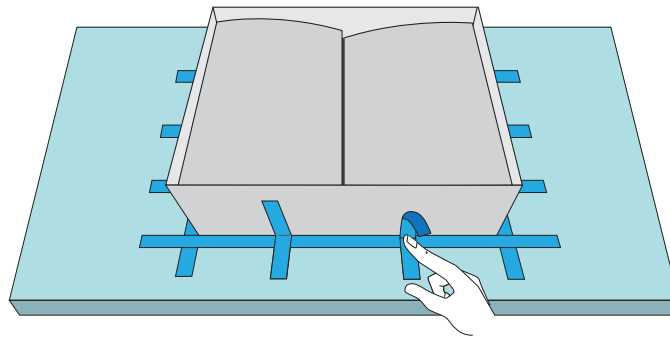

Carefully cover the sink with a protective cover sheet.

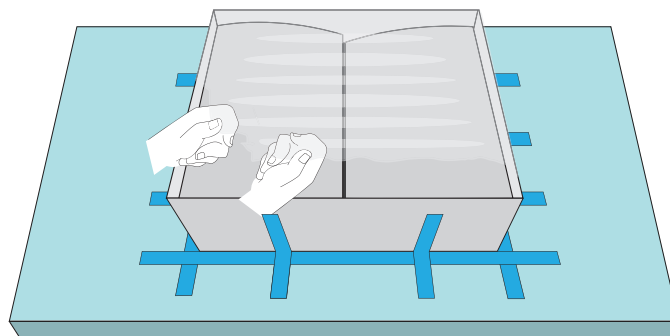

*** Allow 24 - 48 hours for the silicone to set.**

