


### STEP 3C: EPOXY

Use 2 part commercial grade epoxy glue to secure the anchors in place.

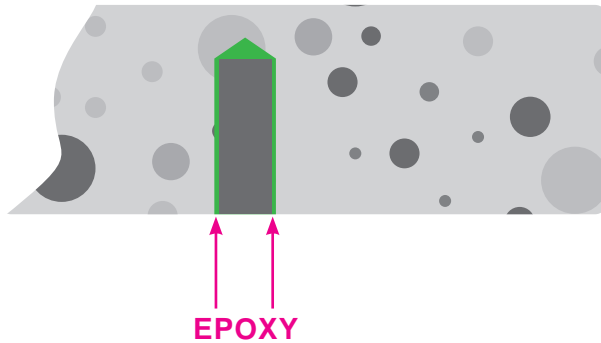

### STEP 3D: EPOXY CURE


Allow epoxy to cure based on the recommended curing time provided by the epoxy manufacturer.



**\* Once Epoxy is cured and the anchors are permanently fixed, go to step 4.**

### STEP 4: SINK MOUNTING

Attach sink mounting clips to the anchors using screws provided.

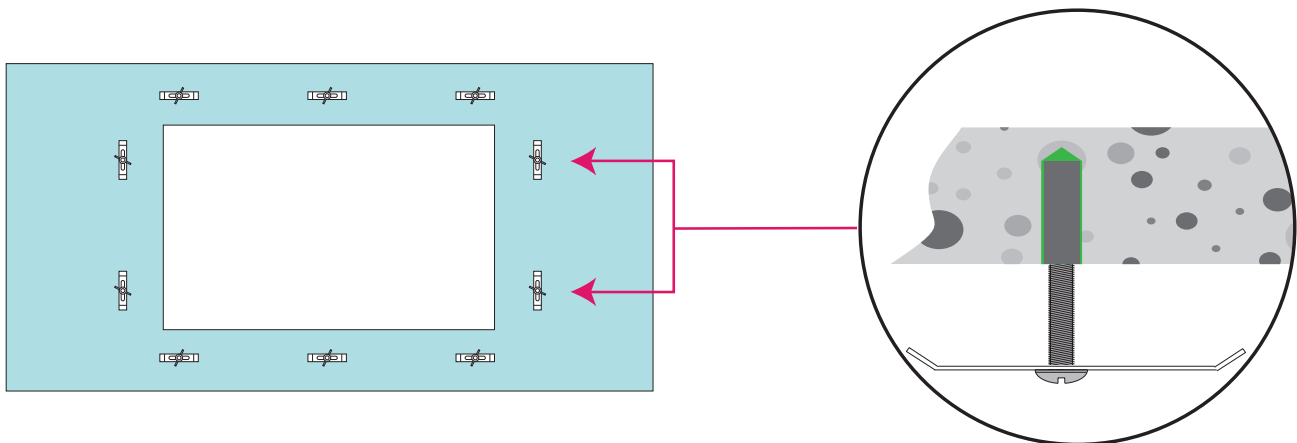

**\* Do not tighten the screws at this time**