


STEP 1: CUTTING SINK OPENING

IMPORTANT

* Only a professional stone fabricator is qualified to perform this installation.

Carefully measure the width and length of the sink bowl, then add 1/8" to all four sides. This is the dimension of the cutout for this sink.

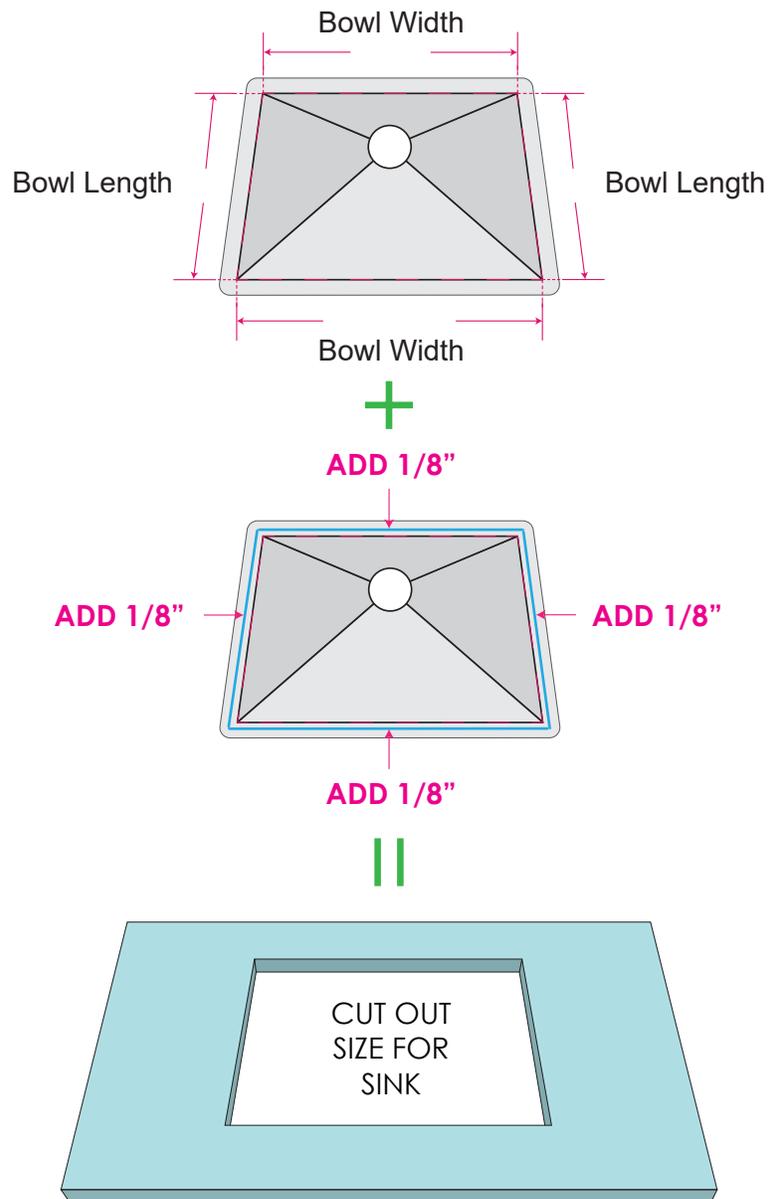


* Once the sink cutout size and location is confirmed, proceed to cut the sink opening on the counter top.


STEP 2: CLEANING

Gently clean the counter and the sink rim to remove dirt, oil and contaminants from the surfaces. Do not use any abrasive cleaning solutions that may damage the counter top surface and sink frame.


1. Clean the side of countertop

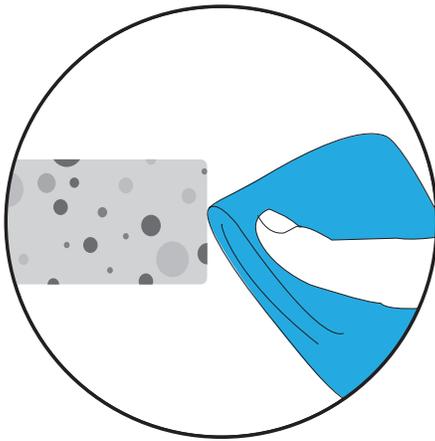

2. Clean underside of the countertop

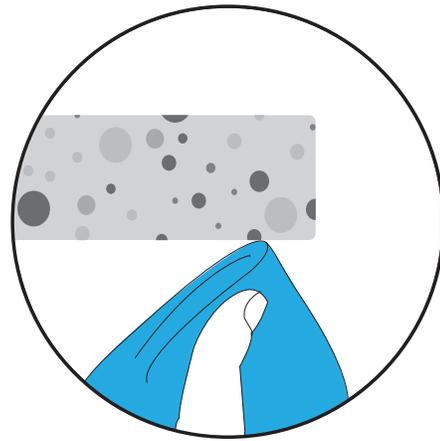

3. Clean top of the sink rim

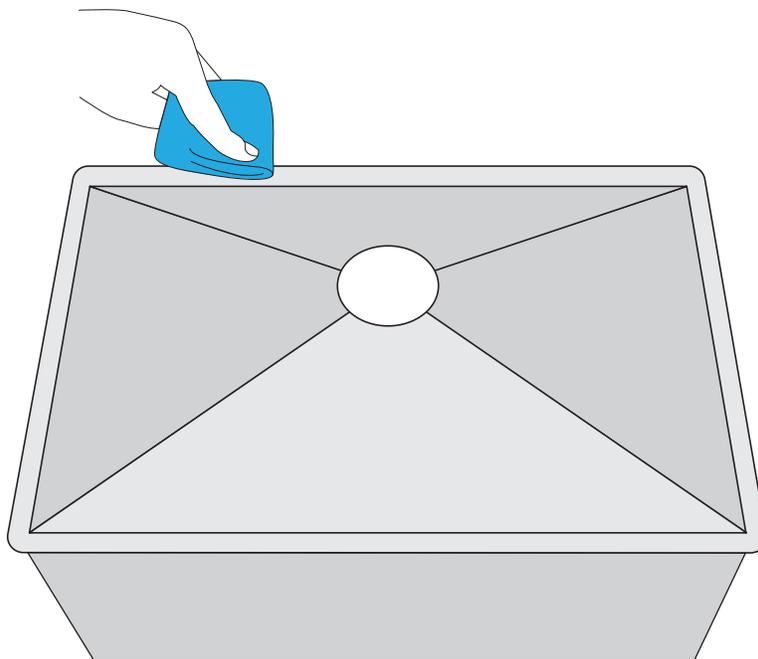


STEP 3: INSTALLING SINK MOUNTING HARDWARE

STEP 3A: ANCHOR LOCATION


1. Insert anchors into the underside of the counter top.
2. Align your sink up properly with the sink cutout, mark the position of the anchors. They should be approximately 1" away from the sink rim and 2 - 3 anchors on each side evenly placed.

Underside of Sink and Counter Top

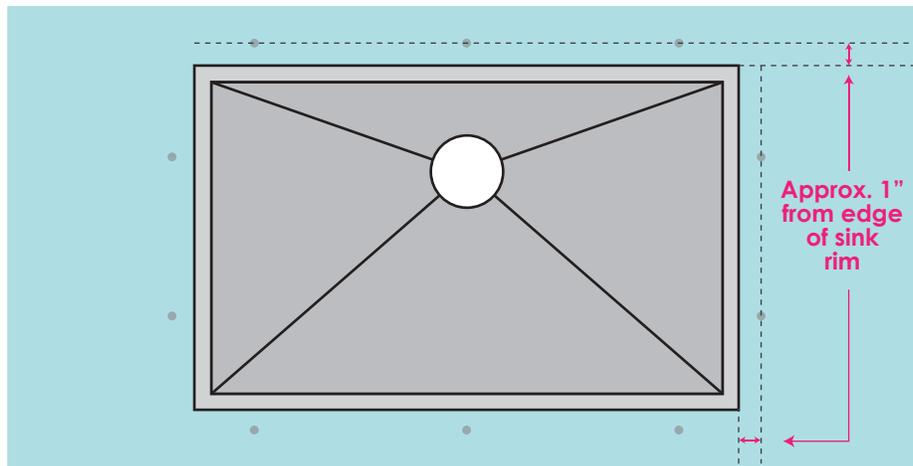


STEP 3B: DRILLING HOLES

Drill the proper size holes for the anchors to be installed.

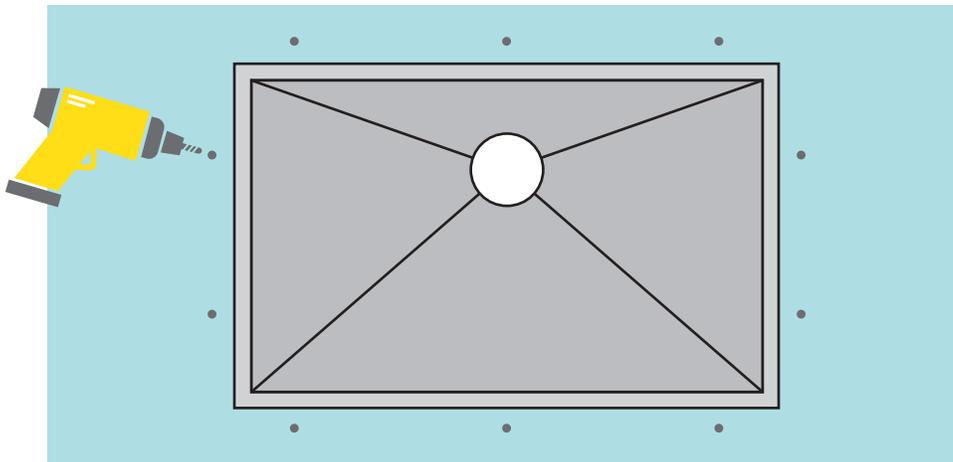

STEP 3C: EPOXY

Use 2 part commercial grade epoxy glue to secure the anchors in place.

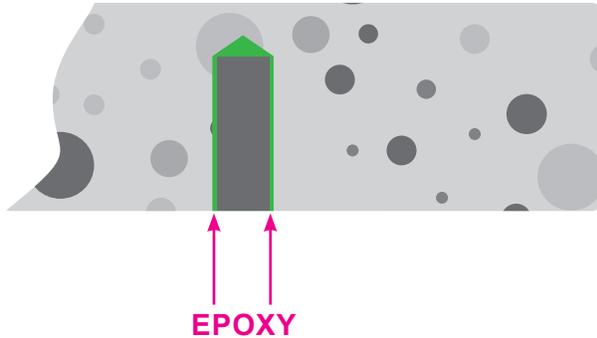

STEP 3D: EPOXY CURE



Allow epoxy to cure based on the recommended curing time provided by the epoxy manufacturer.



* Once Epoxy is cured and the anchors are permanently fixed, go to step 4.

STEP 4: SINK MOUNTING

Attach sink mounting clips to the anchors using screws provided.

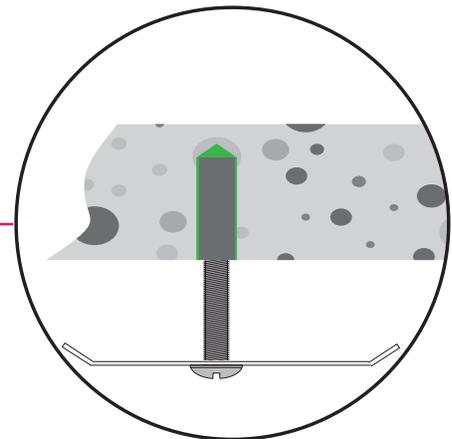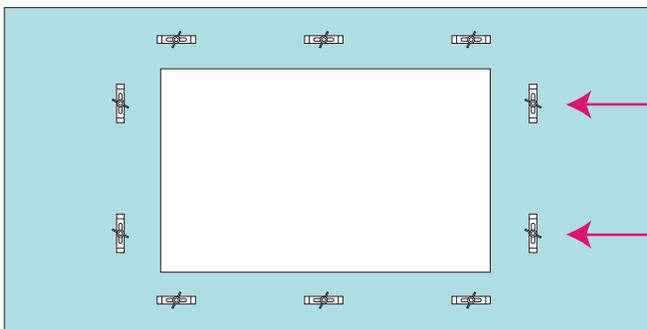


* Do not tighten the screws at this time

STEP 5: SILICONE CAULKING

IMPORTANT


- * **MUST** use 100% silicone for this installation.
- * Silicone color should match counter top color as close as possible.
- * If there is **NO** matching color to the counter top, use **CLEAR** silicone.
- * **NEVER** use “SILVER” silicone.
- * **NEVER** perform this procedure outdoors or under sunlight.

Apply a thin coat of silicone on the sink rim as shown below.

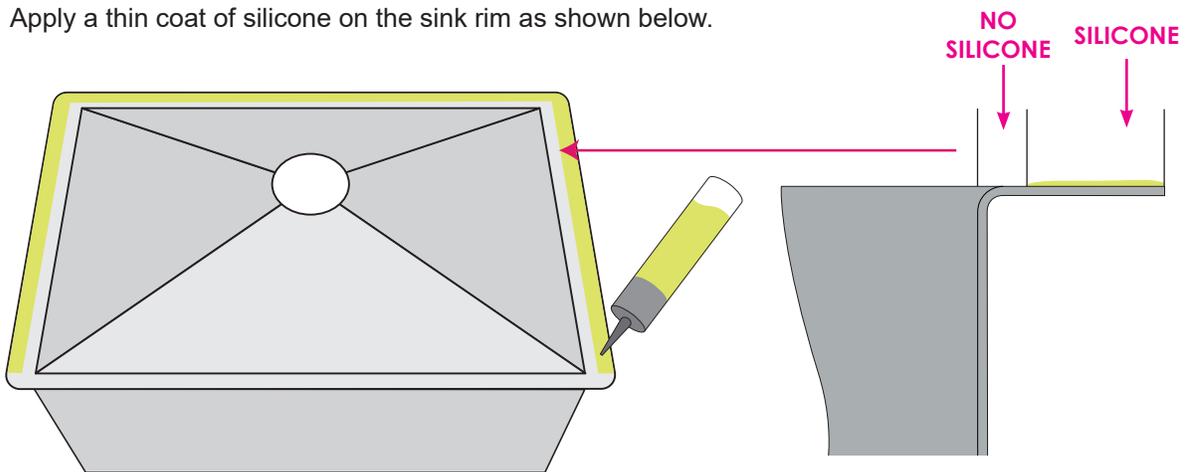


STEP 6: INSERTING THE SINK

Position the sink to the underside of the counter top and ensure the sink is aligned at the center of the sink cutout.

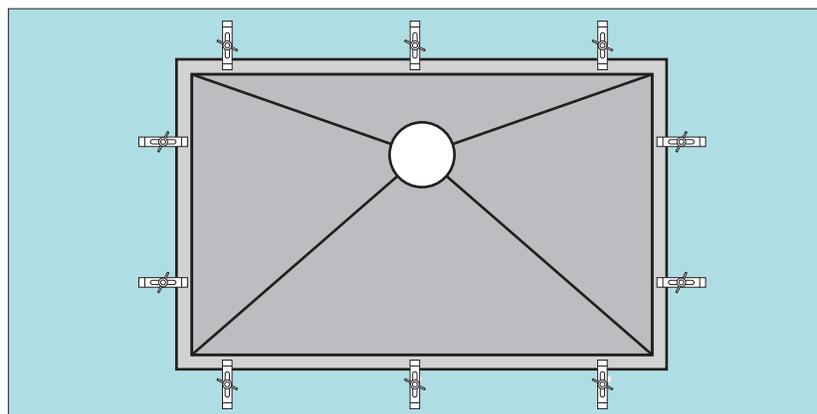

STEP 7: SECURE SINK

Once the sink is centered, tighten all of the sink mounting clip screws to secure the sink in place.

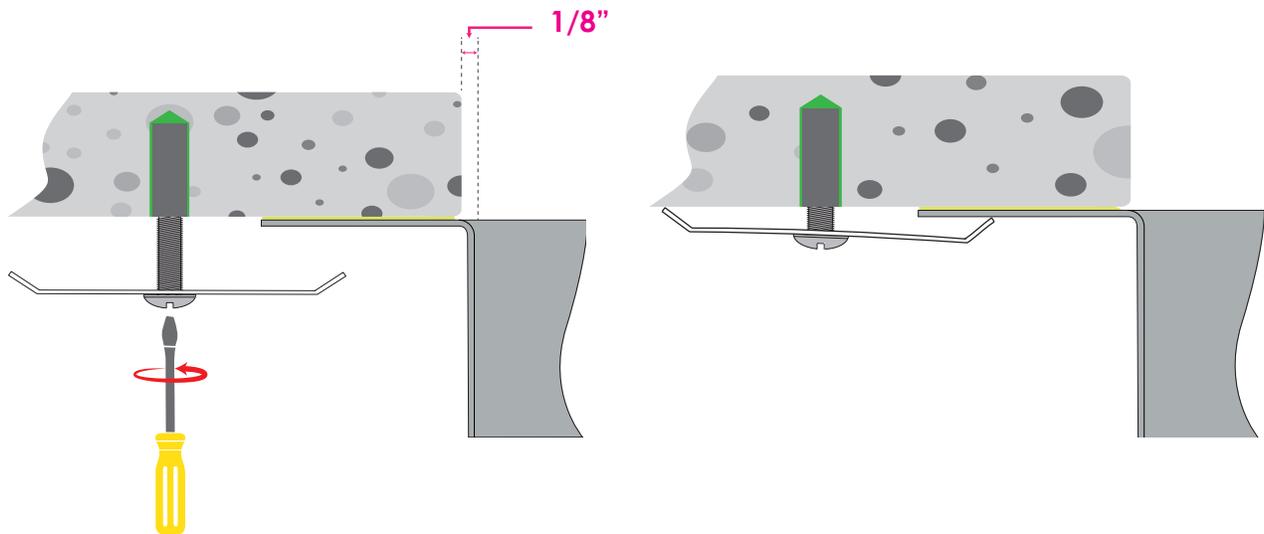

*** Allow 12 - 48 hours for the silicone to set before using the sink.**



**The installation is now complete.
Please enjoy your sink!**